

Instructions and drilling info for mounting the Fanatec Elite Pedals to the VRC MKII

I have found that using the bottom 2 mounting bungs in the Elite Pedal assembly is enough to secure them to the VRC MKII pedal plate. Since you are only pushing and not pulling it will keep them in place.

Below is a guide to drill the needed holes. I have shown 2 pair of holes one pair for using right foot braking "RF 1 and 2" and one pair for left foot braking "LF 1 and 2". Look at the Steering Post here to see the difference.




<RF



LF>


Use the guide below to drill the holes closest to the edge of the pedal plate first and then use the template

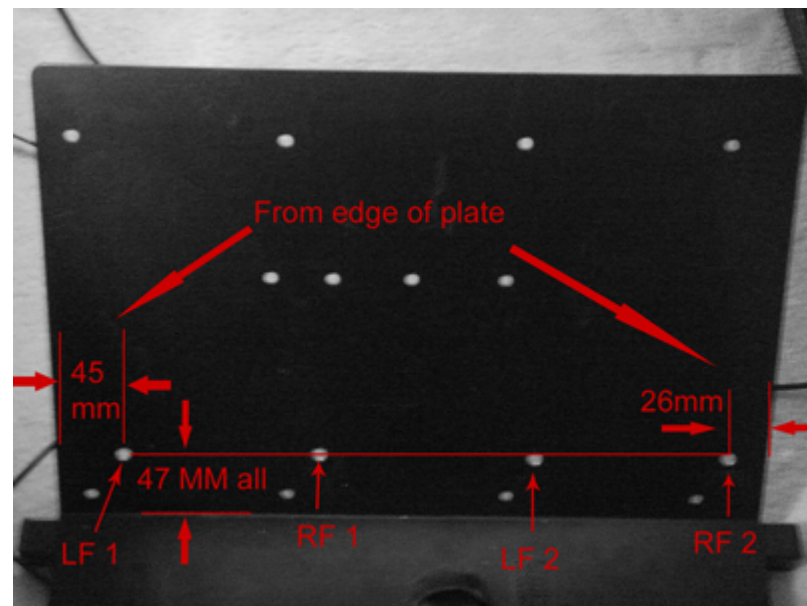

supplied with the Pedal set to drill the second hole for whichever braking method you prefer. All 4 holes are the same height "47mm" up from the bend in the pedal plate. When using the template supplied with the pedals keep in mind it is a bit wider than the set itself, just use it for the distance between the holes.

The holes should be 5/16's or a bit smaller. I like the 5/16's as it give a little bit of clearance if the holes are not in the perfect position.

I also added a small piece of Velcro to the Square plug box near the top of the pedals to keep it more secure to the top of the pedal plate, shown here>>>

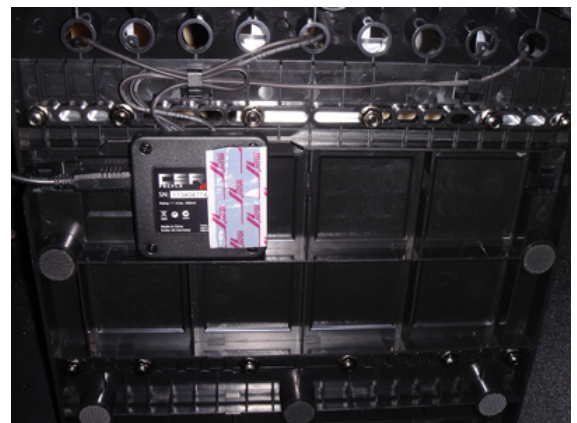

See next page on how to deal with the Pedal Angle

If you want to have the pedal angle more vertical, these pedals are very adjustable. Here what I did to make the angle more realistic. Take the blocks behind the Pedal plates and reverse them.

This is the Standard Position:



Here is the Modified Position:



I hope this helps you enjoy your VRC MKII!

Bob Earl

Email: info@bobearlracing.com